

INSTRUCTION MANUAL

REGULATED POWER SUPPLIES

MODELS

LND-P-152
LND-P-MPU

MP MASTER




MA28800



LAMBDA

LAMBDA ELECTRONICS

MELVILLE, L. I., N. Y.

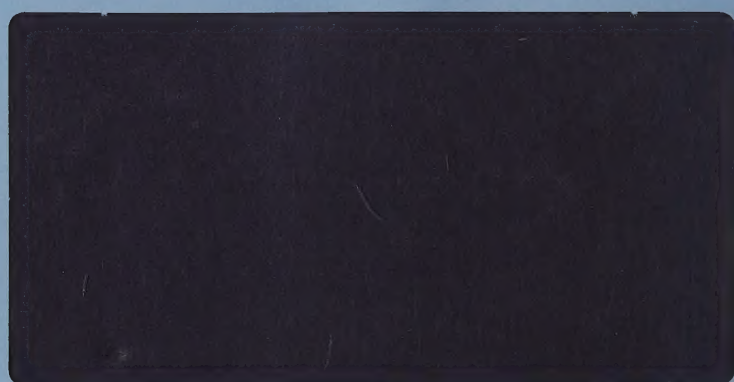

**INSTRUCTION MANUAL
FOR
REGULATED POWER SUPPLIES**

MODELS

**LND-P-152
LND-P-MPU**

This manual provides instructions intended for the operation of Lambda power supplies, and is not to be reproduced without the written consent of Lambda Electronics. All information contained herein applies to all LND-P models unless otherwise specified.

LAMBDA ELECTRONICS

MAIN PLANT TELEPHONE: 516 MYrtle 4-4200

MELVILLE, L.I., N.Y.

IM-LND-P

TABLE OF CONTENTS

Section	Page
SPECIFICATIONS AND FEATURES	1
THEORY OF OPERATION	4
OPERATING INSTRUCTIONS	6
Basic Mode of Operation	6
Connections for Operation	6
Supply Load Connections	6
Operation After Protective Device Shutdown	7
MAINTENANCE	8
General	8
Trouble Analysis	8
Checking Transistors and Capacitors	8
Printed Circuit Board Maintenance Techniques	8
Trouble Chart	9
Performance Checks	11
Adjustment of Calibration Controls R4 and R24 (LND-P-152)	11
Adjustment of Calibration Controls R4 and R24 (LND-P-MPU)	12
SERVICE	14
PARTS ORDERING	14

SPECIFICATIONS AND FEATURES

D. C. OUTPUT — Voltage regulated for line and load. See table I for voltage and current ratings.

TABLE I

MODELS	VOLTAGE RANGE	MAXIMUM CURRENT (AMPS) AT AMBIENT TEMPERATURE*				INPUT POWER (WATTS)**
		40°C	50°C	60°C	71°C	
LND-P-152	±12	4.6	4.0	3.3	2.5	330
	±15	5.3	4.7	3.9	2.9	
LND-P-MPU	5±5%	14.0	12.2	10.0	7.5	300
	9 to 12	2.5	2.2	1.8	1.35	

Current range must be chosen to suit the appropriate maximum ambient temperature.

See below for LND-P-152 current ratings at different output voltages.

*Ratings apply for use with cover removed. Derate current 5% for each ambient temperature if cover is used. Refer to figure 13 for cover removal.

**With output loaded to full current rating and input voltage 127 volts AC, 60 Hz.

DETERMINATION OF CURRENT RATINGS FOR MODEL LND-P-152 AT OUTPUT VOLTAGES BETWEEN ±12 AND ±15 VOLTS — Current ratings vary linearly with output voltages. To determine current for any given output voltage (between rated limits) proceed as follows:

1. Determine operating ambient temperature.
2. Find constants (see formula) m and c in table II below.
3. Apply current formula:

$$I_o = m V_o + c$$

where I_o = output current, m = constant (see table II), c = constant (see table II), and V_o = desired output voltage; determine output current.

TABLE II

40°C		50°C		60°C		71°C	
m	c	m	c	m	c	m	c
0.233	1.8	0.233	1.2	0.2	0.9	0.133	0.9

REGULATED VOLTAGE OUTPUT (each side)

Regulation (line) 0.1% for input variations from 105-127, 127-105, 210-254, or 254-210 volts AC.

Regulation (load) 0.1% for load variations from no load to full load or full load to no load.

Ripple and Noise 1.5 millivolts rms; 5 millivolts peak to peak.

Temperature Coefficient Output change in voltage 0.3%/°C.

Remote Programming (LND-P-MPU only)

External Resistor Nominal 200 ohms/volt output.

Programming Voltage One-to-one voltage change.

Remote Sensing Provision is made for remote sensing to eliminate effect of power output lead resistance on DC regulation.

OVERSHOOT — No overshoot under conditions of power turn-on, turn-off, or power failure.

AC INPUT — 105-127 or 210-254* volts AC at 47-440 Hz. Standard LND-P power supplies are factory wired for 105-127 volt input, but can be rewired for 210-254 volt input. See figure 9 and schematic diagram for rewiring of AC input. For input power see table I. Ratings apply for 57-63 Hz input. For 47-53 Hz or 63-440 Hz input consult factory.

*Certified by Canadian Standards Association for 210-250 volt input.

TRACKING (LND-P-152 only) — Absolute voltage difference of either negative or positive output from nominal within 3%; 0.2% change for all conditions of line, load, and temperature.

OVERLOAD PROTECTION

Thermal Thermostat, resets automatically when over temperature condition is eliminated.

Electrical Automatic electronic current limiting circuit, limits output current to a safe value. Automatic current limiting protects the load and power supply when external overloads and direct shorts occur.

OVERVOLTAGE PROTECTION — Model LND-P-MPU includes fixed built in overvoltage protection circuits which prevent damage to the load caused by excessive power supply output voltage. See table III for overvoltage protection firing range.

TABLE III

OUTPUT	OVERVOLTAGE PROTECTION TRIP-POINT (VOLTS)
5V $\pm$ 5%	6.4 to 6.8
9 to 12V	13.3 to 14.1

INPUT AND OUTPUT CONNECTIONS — Refer to figure 13 for location.

AC input Screw terminals on printed circuit board.

Ground Solder terminal on chassis.

DC output Screw terminals on printed circuit board.

Sensing Turret terminals on printed circuit board.

Overvoltage Protector (LND-P-152 only) . . Quick disconnect terminal on printed circuit board with mating connector attached.

OPERATING AMBIENT TEMPERATURE RANGE AND DUTY CYCLE — Continuous duty from 0°C to 71°C ambient with corresponding load current ratings for all modes of operation.

STORAGE TEMPERATURE — -55°C to +85°C.

FUNGUS — LND-P power supplies are fungus inert.

DC OUTPUT CONTROL — Screwdriver voltage adjust control(s) permits adjustment of DC output voltage. Refer to figure 13 for location of control(s). One control for dual output of LND-P-152.

PHYSICAL DATA

Size 11" x 4-7/8" x 4-13/32"
Weight 15-1/2 lbs. net; 17 lbs. shipping
Finish Gray, FED. STD. 595 No. 26081.

MOUNTING — One surface, with tapped mounting holes, can be utilized for mounting this unit. LND-P power supplies must be mounted with top facing up and in a horizontal plane. Refer to figure 13 for mounting details.

ACCESSORIES

Overvoltage Protector..... L-12-OV Series Overvoltage Protectors are available.

THEORY OF OPERATION

GENERAL

The text in this section refers to components associated with the plus (+) side of the LND-P-152 power supply and the 5 volt output of the LND-P-MPU power supply, however, the discussion is equally applicable to the LND-P-152 minus (-) side and LND-P-MPU 9 to 12 volt output which have similar components, except for potentiometer R10 which is not used on the (-) side of LND-P-152.

The Lambda power supply consists of an AC input circuit and transformer; a bias supply consisting of an auxiliary rectifier and filter, and pre-regulator; a main regulator circuit consisting of the main rectifier and filter, a series regulator, voltage sensing network, current sensing resistor, voltage reference*, voltage and current comparators*, and amplifier*.

*This circuit element is part of integrated circuit (IC1) in the supply.

The circuit arrangement is shown in block diagram form, figure 10. The circuitry is discussed with reference to the block diagram and the schematic diagram.

FUNCTIONAL DESCRIPTION

Single phase input power is applied to transformer T1 through the input circuit which contains a thermostat to protect the supply against overheating.

The main rectifier, a full wave rectifier, provides the power which is filtered by capacitor C1, and then regulated via a series regulator and delivered to the output. Half-wave auxiliary rectifier CR3 provides voltage filtered by capacitor C2 for preregulator CR4. The reference element, powered by the preregulator, provides a reference voltage for the voltage comparator.

Constant voltage circuit operation is determined by changes in line or load which cause a change in one input to the voltage comparator through voltage dividers R9, R10, and R6. A second input to the comparator is a reference voltage developed in IC1. The comparator compares the output voltage change with the reference voltage resulting in an error signal at the output of the comparator.

The error signal from the comparator controls the voltage across series regulator Q1, and, as applicable, Q2, which function as the active regulating elements in the supply.

Current limit circuit operation is determined by changes in the load. The current comparator samples load current through current sensing resistor R7. When the voltage drop across R7 increases to a preset voltage reference determined by R4, R5, and, as applicable, R14, R15, the current comparator conducts. Thus, when the output current rating of the unit is exceeded, the current comparator conducts, decreasing the drive to Q1, (Q2), resulting in an increase of voltage across the series regulator and a decrease of the output voltage, effectively limiting the output current to a safe value. The current limit value is determined by resistors R4, R5, and, as applicable R14, R15.

When operating conditions approach short circuit, the output voltage decreases. Since the voltage determined by R4, R5, (R14, R15) is proportional to the output voltage, when the output voltage decreases, the amplifier is biased into turn on at lower and lower load currents until output voltage decreases to zero and current decreases to a predetermined low value.

Voltage tracking of model LND-P-152 slave section to the master section is accomplished as follows:

When the output voltage increases, voltage across R23 and R38 also increases, causing an increase in one input to comparator located in IC21. The comparator compares this change with the output voltage reference of the slave unit resulting in an error signal at the output of the comparator. The error signal from the comparator controls the voltage across series regulator Q21, which functions as the active regulating element in the slave section.

OV CIRCUIT, FUNCTIONAL DESCRIPTION (LND-P-MPU only)

When the power supply output voltage increases above the overvoltage limit, HC1 or, as applicable, IC22 fires causing the power supply output voltage to drop.

OPERATING INSTRUCTIONS

BASIC MODE OF OPERATION

This power supply operates as a constant voltage source provided the load current does not exceed the rated value at 40°C. For continuous operation, load current must not exceed the rating for each ambient temperature. When rated load current is exceeded, both voltage and current decrease until voltage reaches zero and the current at short circuit equals approximately 40 percent or less of the rated current.

CONNECTIONS FOR OPERATION

NOTE: Make all connections to the unit before applying AC input power.

Ground Connections. The Lambda power supply can be operated either with negative, positive, or common terminal grounded. Positive, negative, and common ground connections are shown for all suggested output connections illustrated in this manual.

Connection Terminals. Make all connections to the supply at the terminals provided. Apply input power to AC terminals; always connect the ungrounded (hot) lead to terminal indicated in figures 3 through 8. The supply positive terminal is brought out to terminal +V. The supply common terminal is brought out to terminal COM. The supply negative terminal is brought out to terminal -V. Recommended wiring of the power supply to the load and selection of wiring is shown in figures 1 through 8. Selection of proper wiring is made on the basis of load requirements. Make all performance checks and measurements of current or voltage at the rear output terminals. Connect measuring devices directly to terminals or use the shortest leads possible.

SUPPLY LOAD CONNECTIONS

Connections For Operation as a Constant Voltage Source. The output impedance and regulation of the power supply at the load may change when using the supply as a constant voltage source and connecting leads of practical length are used. To minimize the effect of the output leads on these characteristics, remote sensing is used. Recommended types of supply-load connections with local or remote sensing are described in the following paragraphs.

Refer to figure 1 to determine voltage drop for particular cable length, wire size and current conditions. Lead lengths must be measured from supply terminals to load terminals as shown in figure 2.

Local Sensing Connection, Figure 3 (LND-P-152) or Figure 5 (LND-P-MPU). Local sensing is the connection suitable for applications with relatively constant load or for applications with short power output leads. Any load connection combination as shown in the figure can be used.

Remote Sensing Connection, Figure 4 (LND-P-152) or Figure 6 (LND-P-MPU). Remote sensing provides complete compensation for the DC voltage drops in the connecting cables. Sensing leads should be a twisted pair to minimize AC pick-up. A 2.5mf elect., capacitor may be required between output terminals and sense terminals to reduce noise pick-up.

Programmed Voltage Connections, Using External Resistor, Figure 7 (LND-P-MPU Only). Discrete voltage steps can be programmed with a resistance voltage divider valued at 200 ohms/volt change and a shorting-type switch as shown in figure 7. When continuous voltage variations are required, use a variable resistor with the same 200 ohms/volt ratio in place of the resistive voltage divider and shorting-type switch. Use a low temperature coefficient resistor to assure most stable operation.

Before programming, adjust programming resistor for zero resistance and set voltage adjust control to the minimum rated output voltage. Output voltage of programmed supply will be minimum output voltage plus 1 volt per 200 ohms.

As shown in figure 7, voltages can be programmed utilizing either local or remote sensing connections, as desired.

Programmed Voltage Connections Using Programming Voltage, Figure 8 (LND-P-MPU Only). The power supply voltage output can be programmed with an externally connected programming power supply. The output voltage change of the programmed supply will maintain a one-to-one ratio with the voltage of the programming supply. If the output voltage control of the programmed supply is set to minimum output voltage, output voltage of the programmed supply will be minimum output voltage plus voltage of programming supply.

The programming supply must have a reverse current capability of 6 ma. minimum.

Alternatively when supplies with less than 6 ma. reverse current capability are used, a resistor capable of drawing 6 ma. at the minimum programming voltage must be connected across the output terminals of the supply. The programming supply must be rated to handle all excess resistor current at the maximum programming voltage.

OPERATION AFTER PROTECTIVE DEVICE SHUTDOWN

Thermostat Shutdown.

The thermostat opens the input circuit only when the temperature of the heat sink exceeds a maximum safe value. The thermostat will automatically reset when the temperature of the heat sink decreases to a safe operating value. After eliminating the cause(s) for overheating and allowing time for the power supply to cool to a proper temperature, resume operation of the supply.

Overvoltage Shutdown (LND-P-MPU Only).

When the power supply output voltage increases above the overvoltage limit; HC1 or, as applicable, IC22 will short circuit output of the supply. After eliminating the cause(s) for overvoltage, resume operation of the supply by momentarily interrupting the AC input circuit, (refer to Trouble Shooting Chart).

MAINTENANCE

GENERAL

This section describes trouble analysis routine, replacement procedures, calibration and test procedures that are useful for servicing the Lambda power supply. A trouble chart is provided as an aid for the troubleshooter. Refer to the section on specifications and features for the minimum performance standards.

TROUBLE ANALYSIS

Whenever trouble occurs, systematically check fuse, primary power lines, external circuit elements, and external wiring for malfunction before trouble shooting the equipment. Failures and malfunctions often can be traced to simple causes such as improper jumper and supply-load connections or fuse failure due to metal fatigue.

Use the electrical schematic diagram and block diagram, figure 10, as an aid to locating trouble causes. The schematic diagram contains various circuit voltages that are averages for normal operation. Measure these voltages using the conditions for measurement specified on the schematic diagram. Use measuring probes carefully to avoid causing short circuits and damaging circuit components.

CHECKING TRANSISTORS AND CAPACITORS

Check transistors with an instrument that has a highly limited current capability. Observe proper polarity to avoid error in measurement. The forward transistor resistance is low but never zero; backward resistance is always higher than the forward resistance.

For good transistors, the forward resistance for any junction is always greater than zero.

Do not assume trouble is eliminated when only one part is replaced. This is especially true when one transistor fails, causing other transistors to fail. Replacing only one transistor and turning power on, before checking for additional defective components could damage the replaced component.

When soldering semi-conductor devices, wherever possible, hold the lead being soldered with a pair of pliers placed between the component and the solder joint to provide an effective heat sink.

NOTE: The leakage resistance obtained from a simple resistance check of a capacitor is not always an indication of a faulty capacitor. In all cases the capacitors are shunted with resistances, some of which have low values. Only a dead short is a true indication of a shorted capacitor.

PRINTED CIRCUIT BOARD MAINTENANCE TECHNIQUES

1. If foil is intact but not covered with solder it is a good contact. Do not attempt to cover with solder.
2. Voltage measurements can be made from either side of the board. Use a needlepoint probe to penetrate to the wiring whenever a protective coating is used on the wiring. A brass probe can be soldered to an alligator clip adapted to the measuring instrument.
3. Wherever possible use a heat sink when soldering transistors.
4. Broken or damaged printed wiring is usually the result of an imperfection, strain or careless soldering. To repair small breaks, tin a short piece of hook-up wire to bridge the break, and holding the wire in place, flow solder along the length of wire so that it becomes part of the circuitry.

5. When unsoldering components from the board never pry or force loose the part; unsolder the component by using the wicking process described below:

- a) Select a 3/16 inch tinned copper braid for use as a wick; if braid is not available, select AWG No. 14 or No. 16 stranded wire with 1/2 inch insulation removed.
- b) Dip the wick in liquid rosin flux.
- c) Place the wick onto the soldered connection and apply soldering iron onto the wick.
- d) When sufficient amount of solder flows onto the wick, freeing the component simultaneously remove iron and wick.

TRUBLE CHART

The trouble chart is intended as a guide for locating trouble causes, and is used along with the schematic diagram.

The operating conditions assumed for the trouble chart are as follows:

- a) AC power of proper voltage and frequency is present at input terminals.
- b) Either positive, negative, or common terminal is connected to chassis ground.
- c) The power supply is connected for constant voltage with local sensing. See schematic; dotted lines indicate jumpers connected for local sensing operation.

TRUBLE SHOOTING CHART

Symptom	Possible Cause	Remedy
1. Zero volts DC output, both sides of LND-P-152 or 5V output of LND-P-MPU.	Short circuit across output of supply.	Check load and load connections, correct as necessary.
	Open F1.	Refer to "Symptoms 4, 6, and 9".
	Q1, Q2, R7 open.	Check Q1, Q2, R7 for open, replace as necessary
	Shorted CR6, C4, C14, C34.	Check CR6, C4, C14, C34 for short, replace as necessary.
	IC1 defective.	Voltage at pin 6 must measure above rated output voltage. If reading exceeds nominal voltage rating by 3 volts or if less than output voltage rating replace IC1.
2. Zero volts DC output, minus side of LND-P-152 or 9 to 12V output of LND-P-MPU.	Q21, R27 open.	Check Q21, R27 for open, replace as necessary.
	Short circuit across output of supply.	Check load and load connections, correct as necessary

TROUBLE SHOOTING CHART

<u>Symptom</u>	<u>Possible Cause</u>	<u>Remedy</u>
	Shorted CR26, C24, C44.	Check CR26, C24, C44 for short, replace as necessary.
	IC21 defective.	See "IC1 Defective".
3. Unable to adjust output voltage.	Damaged VDC ADJ. control.	Check R10, R20 for short or open, replace as necessary.
4. High ripple at twice line frequency and unregulated DC output, both sides of LND-P-152 or 5V output of LND-P-MPU.	Q1, Q2 shorted.	Check Q1, Q2 for short, replace as necessary.
	Jumper between terminals +V and +S open. Jumper between -V and -S open (LND-P-MPU).	Refer to figures 3-8 for proper supply terminal connections.
	IC1 defective.	See "Symptom 1".
5. High ripple at twice line frequency and unregulated DC output, minus side of LND-P-152 or 9 to 12V output of LND-P-MPU.	Q21 shorted.	Check Q21 for short, replace as necessary.
	Jumper between terminals -V and -S open. Jumper between terminals +V and +S open (LND-P-MPU).	Refer to figures 3-8 for proper supply terminal connections.
	IC21 defective.	See "IC1 Defective".
6. High ripple at line frequency, both sides of LND-P-152 or 5V output of LND-P-MPU.	Defective main rectifier.	Check for open or short CR1A, CR1B.
	C1 open.	Check C1 for open, replace as necessary.
7. High ripple at line frequency, minus side of LND-P-152 or 9 to 12V output of LND-P-MPU.	Defective main rectifier.	Check for open or short CR21A, CR21B.
	C21 open.	Check C21 for open, replace as necessary.
8. High ripple at frequency other than line or twice line frequency.	Oscillation due to defective component in filter network.	Check for open C3, C4, C14 C23, C24, C34, C44, R16, and R36.
9. Regulated high output voltage, limited voltage adjust range, both sides of LND-P-152 or 5V output of LND-P-MPU.	Defective IC1.	See "Symptom 1".

TROUBLE SHOOTING CHART

<u>Symptom</u>	<u>Possible Cause</u>	<u>Remedy</u>
10. Regulated high output voltage, minus side of LND-P-152 or 9 to 12V output of LND-P-MPU.	Defective IC21.	See "Defective IC1"
11. Very low output voltage on model LND-P-MPU, either side.	HC1 or IC22 fired due to 0V condition.	Momentarily interrupt AC input. If supply operates normally, a transient has occurred in line or load, check wiring (switches, etc.). If supply fails to reach full output voltage, remove AC input, disconnect +V pin or HC1 or, as applicable pin 2 of IC22; remove load; apply AC power and refer to procedure for: Unregulated DC Output "Symptom 4 or 5".

PERFORMANCE CHECKS

Check the ripple and regulation of the power supply using the test connection diagram show in figure 11 or, as applicable, figure 12. Use suggested test equipment or equivalent to obtain accurate results. Refer to SPECIFICATIONS AND FEATURES for minimum performance standards.

Set the differential meter, DC DVM (John Fluke Model 891A or equivalent) to the selected power supply operating voltage. Check the power supply load regulation accuracy while switching from the load to no-load condition. Long load leads should be a twisted pair to minimize AC pick-up.

Use a Variac to vary the line voltage from 105—127 or 127—105 volts AC and check the power-supply line regulation accuracy on the TVM differential meter.

Use a TVM, John Fluke Model 931B or equivalent, to measure rms ripple voltage of the power supply DC output. Use oscilloscope to measure peak-to-peak ripple voltage of the power supply DC output.

Perform checks on both outputs of the power supply.

ADJUSTMENT OF CALIBRATION CONTROLS R4 AND R24 (LND-P-152)

Whenever Q1, Q21, R7, R27, R4, R5, R24, R25, IC1, or IC21 are replaced, and voltage and current indications do not reflect maximum ratings, adjust R4 and R24 as follows. The adjustment procedure requires that the power supply is removed from associated equipment, is at an ambient temperature of 25-30°C, and is stabilized and not operating.

1. Remove AC input power to the supply.
2. Break seal on wiper of R4 from resistor housing and turn to full CW position.
3. Operate power supply for constant voltage with local sensing, connected as shown in figure 3, with no external load.

4. Adjust voltage adjust control for 12V output.
5. Apply load to plus side so that output current is 5.98A.
6. Using an oscilloscope, Tektronix 503 or equivalent, observe output voltage while adjusting R4 in CCW direction. Adjust R4 until output ripple begins to increase.
7. Remove load.
8. Adjust voltage adjust control for 15V output.
9. Apply load. Maximum attainable load current shall not exceed 7.0A.
10. After adjustment is completed, remove AC power input to the supply and use glyptol sealant to seal wiper of R4 to resistor housing.
11. After sealing, check setting and repeat adjustment procedure if required.
12. Remove AC input power to the supply.
13. Break seal on wiper of R24 from resistor housing and turn to full CW position.
14. Operate power supply for constant voltage with local sensing as shown in figure 3, with no external load.
15. Adjust voltage adjust control for 12V output.
16. Apply load to minus side so that output current is 5.98A.
17. Using an oscilloscope, Tektronix 503 or equivalent, observe output voltage while adjusting R24 in CCW direction. Adjust R24 until output ripple begins to increase.
18. Remove load.
19. Adjust voltage adjust control for 15V output.
20. Apply load. Maximum attainable load current shall not exceed 7.0A.
21. After adjustment is completed, remove AC power input to the supply and use glyptol sealant to seal wiper of R24 to resistor housing.
22. After sealing, check setting and repeat adjustment procedure if required.

ADJUSTMENT OF CALIBRATION CONTROLS R4 AND R24 (LND-P-MPU)

Whenever Q1, Q2, R7, R27, R4, R5, R24, R25, IC1, or IC21 are replaced, and voltage and current indications do not reflect maximum ratings, adjust R4 and R24 as follows. The adjustment procedure requires that the power supply is removed from associated equipment, is at an ambient temperature of 25°C-30°C, and is stabilized and not operating.

1. Remove AC input power to the supply.
2. Break seal on wiper of R4 from resistor housing and turn to full CW position.
3. Operate power supply for constant voltage with local sensing, connected as shown in figure 5, with no external load.

4. Adjust voltage adjust control of 5V output for output voltage of 4.75V.
5. Apply load to 5V output so that output current is 18.2A.
6. Using an oscilloscope, Tektronix 503 or equivalent, observe output voltage while adjusting R4 in CCW direction. Adjust R4 until output ripple begins to increase.
7. Remove load.
8. Adjust voltage adjust control of 5V output for output voltage of 5.25V.
9. Apply load. Maximum attainable load current shall not exceed 21A.
10. After adjustment is completed, remove AC power input to the supply and use glyptol sealant to seal wiper of R4 to resistor housing.
11. After sealing, check setting and repeat adjustment procedure if required.
12. Remove AC input power to the supply.
13. Break seal on wiper of R24 from resistor housing and turn to full CW position.
14. Operate power supply for constant voltage with local sensing as shown in figure 5, with no external load.
15. Adjust voltage adjust control of 9-12V output for output voltage of 9V.
16. Apply load to 9-12V output so that output current is 3.25A.
17. Using an oscilloscope, Tektronix 503 or equivalent, observe output voltage while adjusting R24 in CCW direction. Adjust R24 until output ripple begins to increase.
18. Remove load.
19. Adjust voltage adjust control of 9-12V output for output voltage of 12V.
20. Apply load. Maximum attainable load current shall not exceed 3.75A.
21. After adjustment is completed, remove AC power input to the supply and use glyptol sealant to seal wiper of R24 to resistor housing.
22. After sealing, check setting and repeat adjustment procedure if required.

SERVICE

When additional instructions are required or repair service is desired, contact the nearest Lambda office where trained personnel and complete facilities are ready to assist you.

Please include the power supply model and serial number together with complete details of the problem. On receipt of this information, Lambda will supply service data or advise shipping for factory repair service.

All repairs not covered by the warranty will be billed at cost and an estimate forwarded for approval before work is started.

PARTS ORDERING

Standard components and special components used with the Lambda power supply can be obtained from the factory. In case of emergency, critical spare parts are available through any Lambda office.

The following information must be included when ordering parts:

1. Model number and serial number of power supply and purchase date.
2. Lambda part number.
3. Description of part together with circuit designation.
4. If part is not an electronic part, or is not listed, provide a description, function, and location of the part.

PARTS LIST

The electrical parts located on Lambda models LND-P-152 and LND-P-MPU are listed here. Parts common to both models are listed first. Unique parts of individual are listed separately, by model, immediately following the common parts listing.

COMMON PARTS MODELS LND-P-152 AND LND-P-MPU		
CIRC. DESIG.	DESCRIPTION	LAMBDA NO.
C2	Cap., elect., 180 mf -10 +100%, 40 vdc	CBR-18-155
C3	Cap., ceramic, 0.001 mf ±20%, 1,000 vdc	CDK-10-010
C7, C9 thru C13, C15 thru C20	Not assigned	
C23	Same as C3	
C24	Cap., elect., 270 mf -10 +100%, 25 vdc	CBR-27-163
C28	Cap., elect., 2.2 mf ±20%, 50 vdc	CBN-22-007
C29 thru C33, C35 thru C43, CR2	Not assigned	
CR3, CR5	Rectifier	FBL-00-030
CR7 thru CR20	Not assigned	
CR21	Rectifier, dual	FBL-00-139
CR22	Not assigned	
CR25	Same as CR3	
IC1	Integrated circuit	FBT-00-073
IC2 thru IC20	Not assigned	
IC21	Same as IC1	
Q1	Transistor, NPN	FBN-L164
Q4 thru Q20	Not assigned	
R4	Res., var., cermet, 600 ohms ±10%, 1 w	DRR-60-009
R6	Res., film, 499 ohms ±1%, ½ w	DCR-50-029
R8, R11	Not assigned	
R13	Res., comp., 27 ohms ±10%, ¼ w	DCB-2701
R16	Res., comp., 10 ohms ±10%, ¼ w	DCB-1001
R17 thru R19	Not assigned	
R22	Res., comp., 1,000 ohms ±10%, ¼ w	DCB-1021
R24 R28, R30, R32	Same as R4 Not assigned	

COMMON PARTS (Cont.) MODELS LND-P-152 AND LND-P-MPU (Cont.)		
CIRC. DESIG.	DESCRIPTION	LAMBDA NO.
R33	Same as R13	
R35	Not assigned	
R36	Same as R16	
R37	Not assigned	

UNIQUE PARTS MODEL LND-P-152		
C1	Cap., elect., 12,000 mf -10 +100%, 30 vdc	CBT-12-074
C4	Cap., elect., 270 mf -10 +100%, 25 vdc	CBR-27-163
C5, C6	Cap., mylar, 0.047 mf ±10%, 80 vdc	CGL-47-013
C8	Not assigned	
C14	Same as C4	
C21	Same as C1	
C22	Not assigned	
C25, C26	Same as C5	
C27	Cap., ceramic, 0.1 mf ±20%, 100 vdc	CDM-10-003
C34	Not assigned	
C44	Same as C4	
CR1	Rectifier, dual	FBL-00-139
CR4	Rectifier, zener diode	FBM-Z105
CR6	Rectifier	FBL-00-094
CR23	Not assigned	
CR24	Same as CR4	
CR26	Same as CR6	
Q2, Q3	Not assigned	
Q21	Transistor, NPN	FBN-L164
R1	Res., ww, 1,800 ohms ±3%, 3 w	DFS-18-048
R2	Res., comp., 1,000 ohms ±10%, ¼ w	DCB-1021
R3	Not assigned	
R5	Res., comp., 2,700 ohms ±10%, ¼ w	DCB-2721
R7	Res., ww, 0.1 ohm ±5%, 5 w	DLM-10-015
R9	Res., film, 1,620 ohms ±1%, ½ w	DCS-16-113
R10	Res., var., cermet, 1,500 ohms ±10%, 1 w	DRS-14-025
R12, R14, R15, R20	Not assigned	
R21	Res., ww, 3,600 ohms ±3%, 3 w	DFS-36-050
R23	Res., film, 8,870 ohms ±½%, ¼ w	DCS-89-090
R25	Same as R5	
R26	Res., film, 887 ohms ±1%, ¼ w	DCR-89-094
R27	Same as R7	

UNIQUE PARTS (Cont.)
MODEL LND-P-152 (Cont.)

<u>CIRC. DESIG.</u>	<u>DESCRIPTION</u>	<u>LAMBDA NO.</u>
R29	Res., film, 3,970 ohms ±½%, ¼ w	DCS-40-119
R31	Not assigned	
R34	Res., film, 665 ohms ±1%, ¼ w	DCR-67-072
R38	Same as R26	
S1	Thermostat	FKA-142-015
T1	Transformer	ABA-LNDP-152

MODEL LND-P-MPU

C1	Cap., elect., 40,000 mf -10 +100%, 15 vdc	CBT-40-067
C4	Cap., elect., 560 mf -10 +100%, 15 vdc	CBR-56-165
C5	Cap., mylar, 0.22 mf	CGM-22-004
C6	±10%, 80 vdc	
C8	Cap., elect., 1 mf ±20%, 35 vdc	CBN-10-009
C14	Same as C4	
C21	Cap., elect., 7,500 mf -10 +100%, 25 vdc	CBS-75-164
C22	Cap., elect., 180 mf -10 +100%, 40 vdc	CBR-18-155
C25	Cap., mylar, 0.01 mf	CGL-10-002
C26	±10%, 200 vdc	
C27	Not assigned	
C34	Cap., elect., 330 mf -10 +100%, 20 vdc	CBR-33-156
CR1	Rectifier, dual	FBL-00-147
CR4	Rectifier, zener diode	FBM-Z155
CR6	Not assigned	
CR23	Rectifier	FBL-00-030
CR24	Rectifier, zener diode	FBM-Z161
F1	Fuse, 25A, 3AB, NORM-BLO	FFJ-25-000
HC1	Hybrid circuit	L-20-OV-5
IC22	Integrated circuit	L-6-OV-12
Q2	Transistor, NPN	FBN-L164

UNIQUE PARTS (Cont.)
MODEL LND-P-MPU (Cont.)

<u>CIRC. DESIG.</u>	<u>DESCRIPTION</u>	<u>LAMBDA NO.</u>
Q3	Transistor, NPN	FBN-L109
Q21	Transistor, NPN	FBN-L169
R1	Res., ww, 1,200 ohms ±3%, 2 w	DFS-12-030
R2	Res., comp., 560 ohms ±10%, ¼ w	DCB-5611
R3	Res., comp., 3,900 ohms ±10%, ¼ w	DCB-3921
R5	Res., comp., 1,200 ohms ±10%, ¼ w	DCB-1221
R7	Res., center tapped, ww, 0.1 ohm ±5%, 22 w	DFM-10-093
R9	Res., film, 392 ohms ±1%, ½ w	DCR-39-098
R10	Res., var., cermet, 400 ohms ±10%, 1 w	DRR-40-013
R12	Res., comp., 27 ohms ±10%, ¼ w	DCB-2701
R14,	Res., comp., 47 ohms	DCB-4701
R15	±10%, ¼ w	
R20	Res., var., cermet, 1,400 ohms ±10%, 1 w	DRS-14-025
R21	Res., ww, 1,500 ohms ±3%, 3 w	DFS-15-045
R23	Not assigned	
R25	Res., comp., 2,200 ohms ±10%, ¼ w	DCB-2221
R26	Res., film, 499 ohms ±1%, ½ w	DCR-50-029
R27	Res., ww, 0.15 ohm ±5%, 3 w	DLM-15-009
R29	Res., film, 1,000 ohms ±1%, ¼ w	DCS-10-055
R31	Res., comp., 560 ohms ±10%, ½ w	DEB-5611
R34	Not assigned	
S1	Thermostat	FKA-132-043
T1	Transformer	ABA-LNDP-MPU
XF1	Fuseholder	HRM-00-012

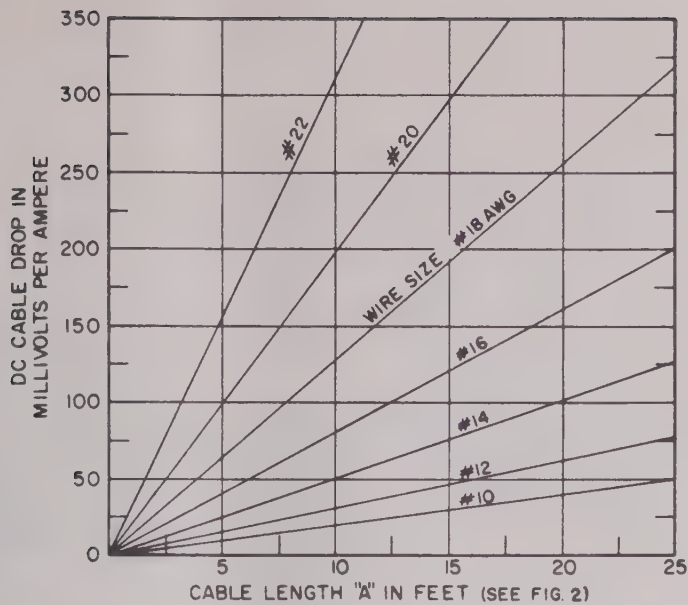


Figure 1. Cable Connection Chart

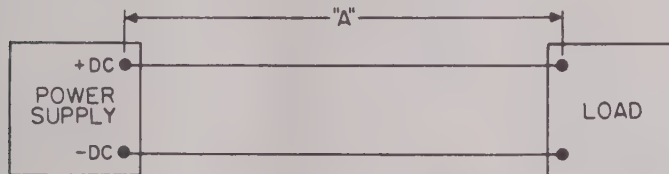


Figure 2. Cable Length "A" in Feet

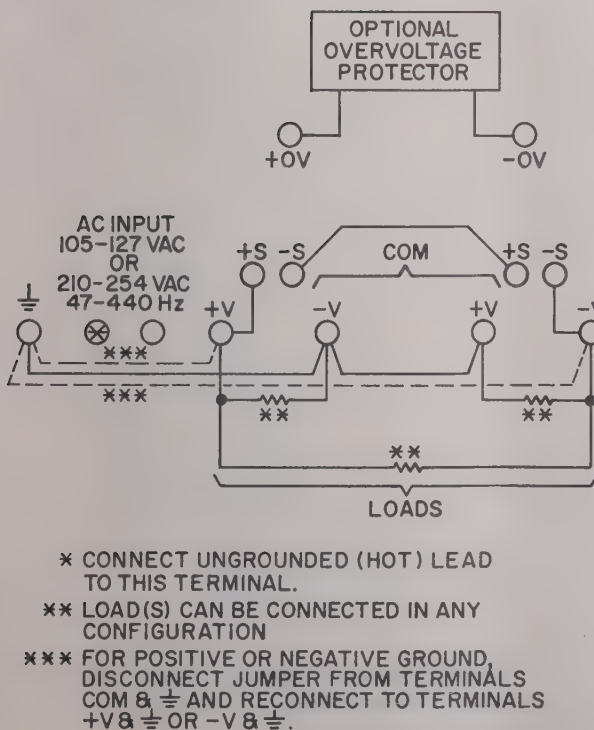


Figure 3. Local Sensing Connection (Model LND-P-152).


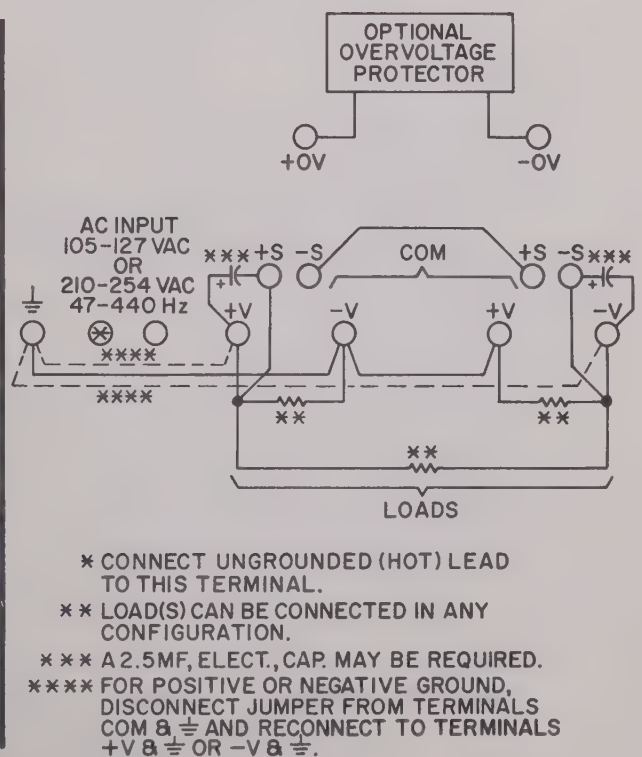



Figure 4. Remote Sensing Connection (Model LND-P-152).

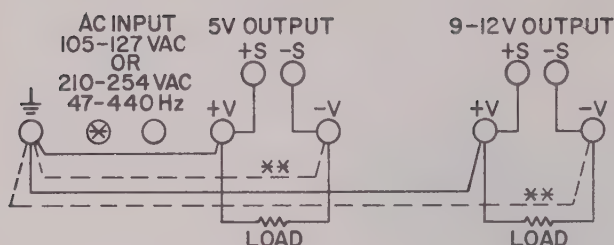

* CONNECT UNGROUNDED (HOT) LEAD TO THIS TERMINAL.

** FOR NEGATIVE GROUND, DISCONNECT JUMPER FROM TERMINALS +V & $\frac{\text{S}}{\text{S}}$ AND RECONNECT TO TERMINALS -V & $\frac{\text{S}}{\text{S}}$.

Figure 5. Local Sensing Connection (Model LND-P-MPU).

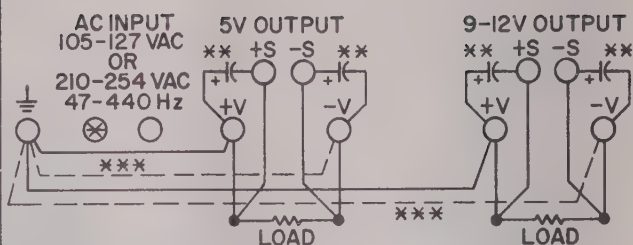


* CONNECT UNGROUNDED (HOT) LEAD TO THIS TERMINAL.

** A 2.5MF, ELECT., CAP. MAY BE REQUIRED.

*** FOR NEGATIVE GROUND, DISCONNECT JUMPER FROM TERMINALS +V & $\frac{\text{S}}{\text{S}}$ AND RECONNECT TO TERMINALS -V & $\frac{\text{S}}{\text{S}}$.


Figure 6. Remote Sensing Connection (Model LND-P-MPU).

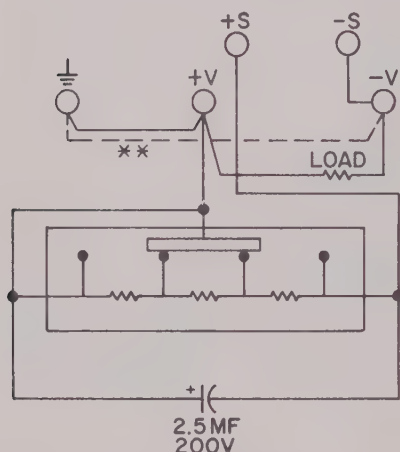

(A) LOCAL SENSING


* A 2.5 MF, ELECT., CAP. MAY BE REQUIRED.

** FOR NEGATIVE GROUND, DISCONNECT JUMPER FROM TERMINALS +V & $\frac{\text{S}}{\text{S}}$ AND RECONNECT TO TERMINALS -V & $\frac{\text{S}}{\text{S}}$.

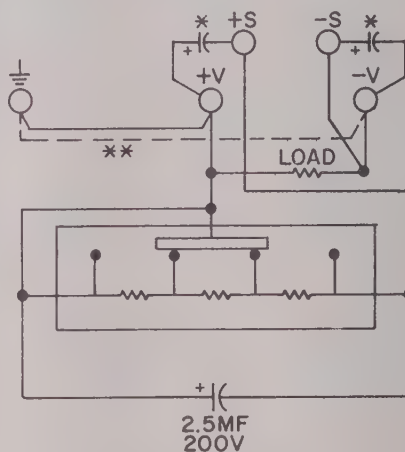

(B) REMOTE SENSING


Figure 7. Programmed Voltage, With External Resistor (LND-P-MPU Only).

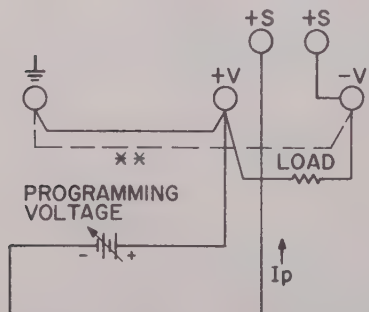

(A) LOCAL SENSING


* A 2.5 MF, ELECT., CAP. MAY BE REQUIRED.

** FOR NEGATIVE GROUND, DISCONNECT JUMPER FROM TERMINALS +V & $\frac{\text{S}}{\text{S}}$ AND RECONNECT TO TERMINALS -V & $\frac{\text{S}}{\text{S}}$.

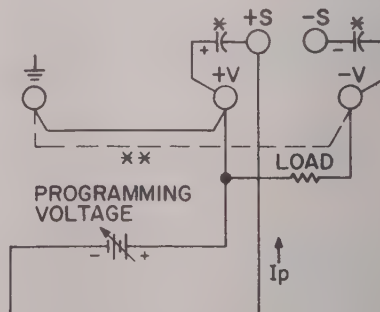

(B) REMOTE SENSING

Figure 8. Programmed Voltage, With External Programming Voltage Source (LND-P-MPU Only).

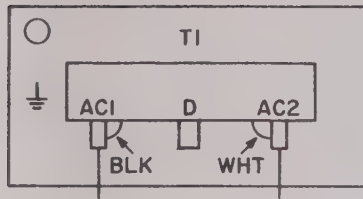

CONNECTION SHOWN IS FOR 105-127 VAC. FOR 210-254 V INPUT, DISCONNECT BLK & WHT TRANSFORMER LEADS FROM TERMINALS AC1 & AC2 AND RECONNECT BOTH LEADS TO TERMINAL D.

Figure 9. Transformer Connections for AC Input Conversion.


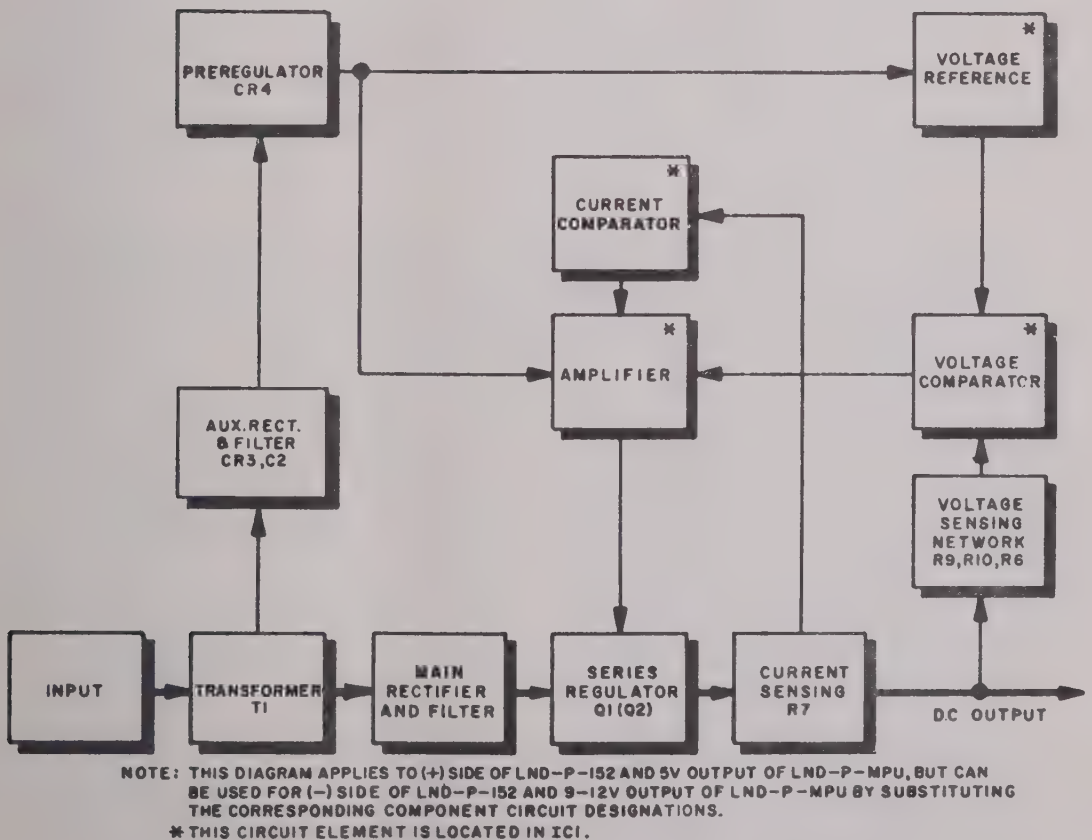


Figure 10. Typical Block Diagram.

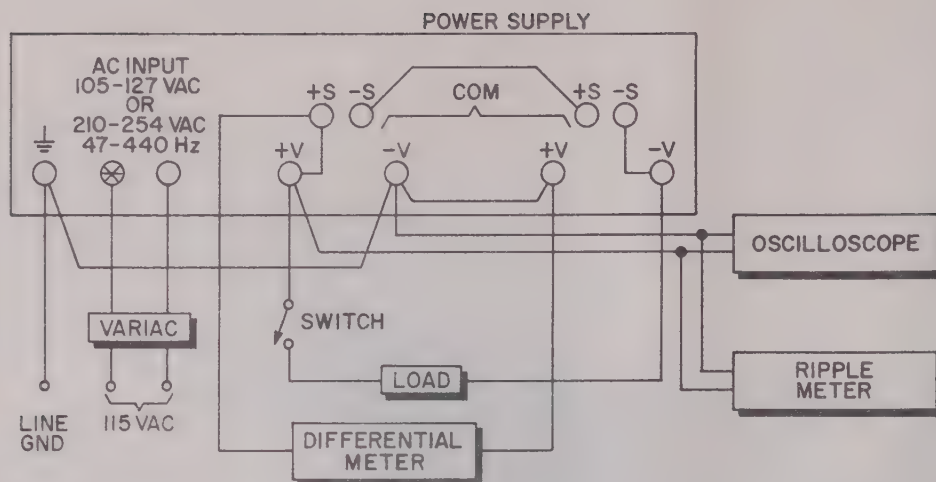


* CONNECT UNGROUNDED (HOT) LEAD TO THIS TERMINAL.

NOTES:

1. REGULATION AND RIPPLE CHECK METERS MUST NOT BE GROUNDED THROUGH THREE-WIRE LINE CORD TO GROUND.
2. PERFORM CHECKS WITH LOCAL SENSING CONNECTIONS ONLY.
3. THIS CONFIGURATION APPLIES TO PERFORMANCE CHECKS FOR POSITIVE OUTPUT SIDE. CONNECT OSCILLOSCOPE, RIPPLE METER, AND DIFFERENTIAL METER TO NEGATIVE OUTPUT FOR CHECKS PERFORMED ON THIS SIDE.

Figure 11. Test Connections For Performance Checks (Model LND-P-152).

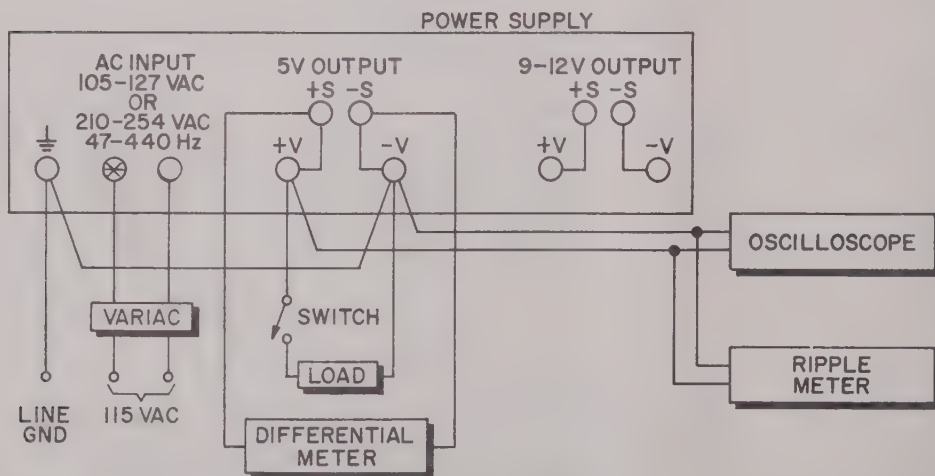

* CONNECT UNGROUNDED (HOT) LEAD TO THIS TERMINAL.

NOTES:

1. REGULATION AND RIPPLE CHECK METERS MUST NOT BE GROUNDED THROUGH THREE-WIRE LINE CORD TO GROUND.
2. PERFORM CHECKS WITH LOCAL SENSING CONNECTIONS ONLY.
3. THIS CONFIGURATION APPLIES TO PERFORMANCE CHECKS FOR 5V OUTPUT. CONNECT LOAD, OSCILLOSCOPE, RIPPLE METER, AND DIFFERENTIAL METER TO 9-12V OUTPUT FOR CHECKS PERFORMED ON THIS OUTPUT.

Figure 12. Test Connections For Performance Checks (Model LND-P-MPU).


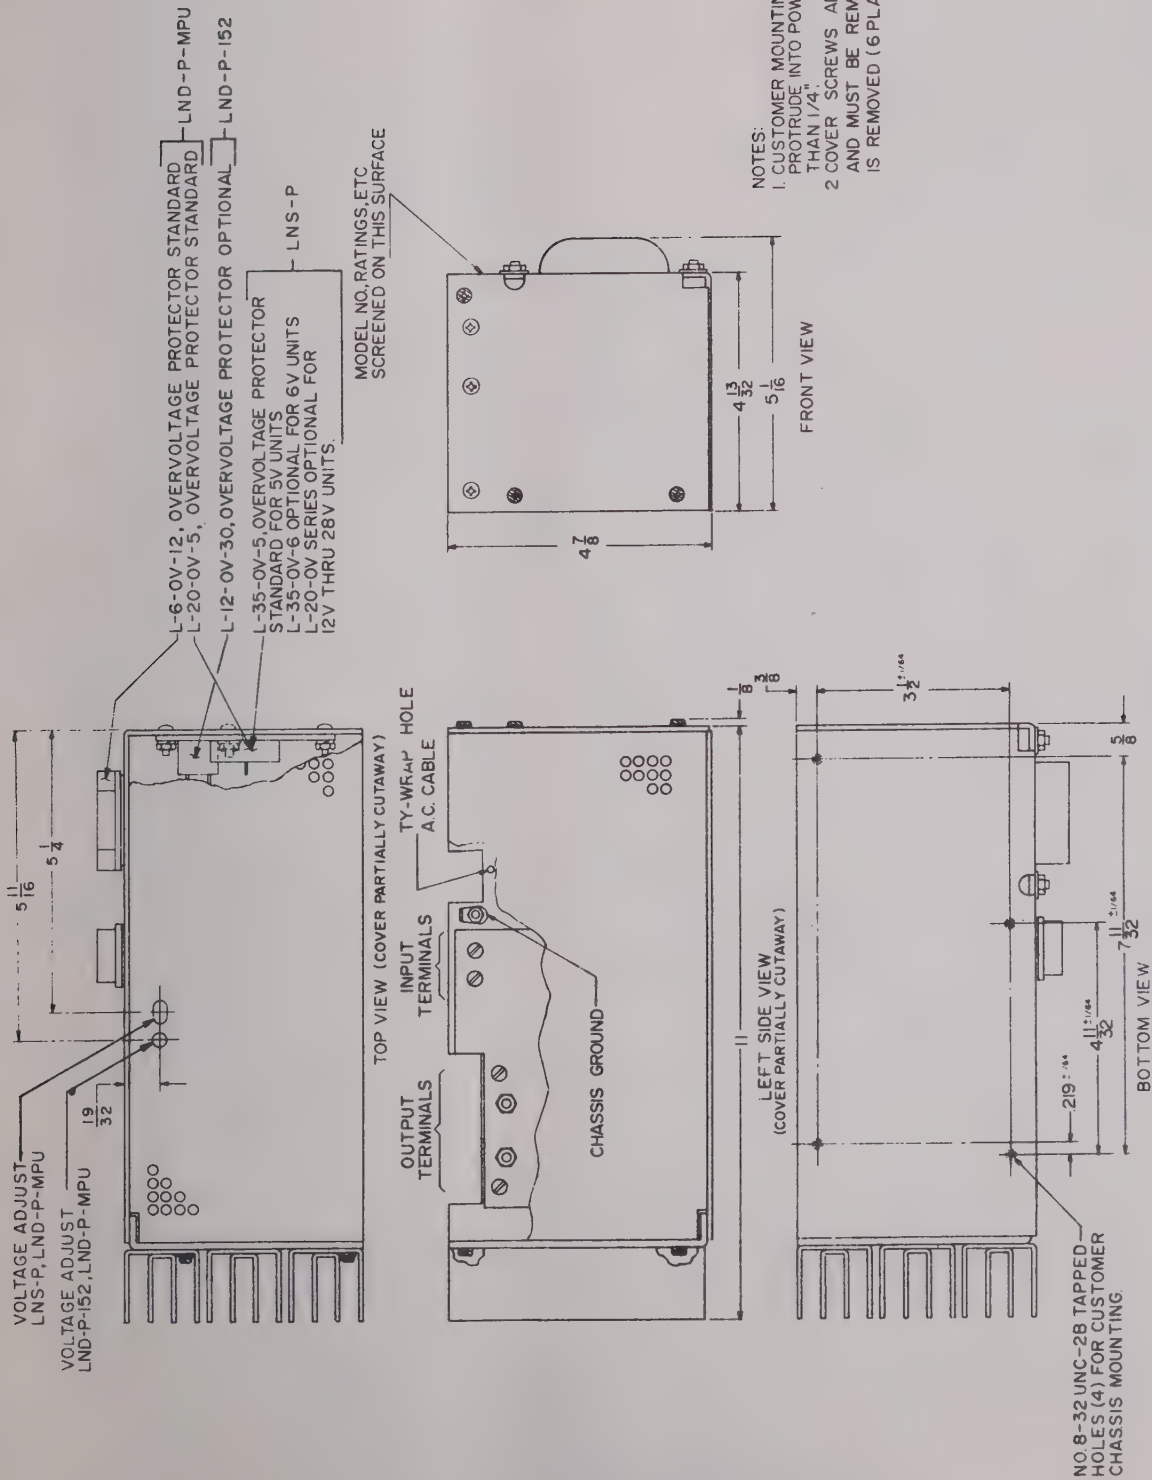


Figure 13. Outline Drawing.

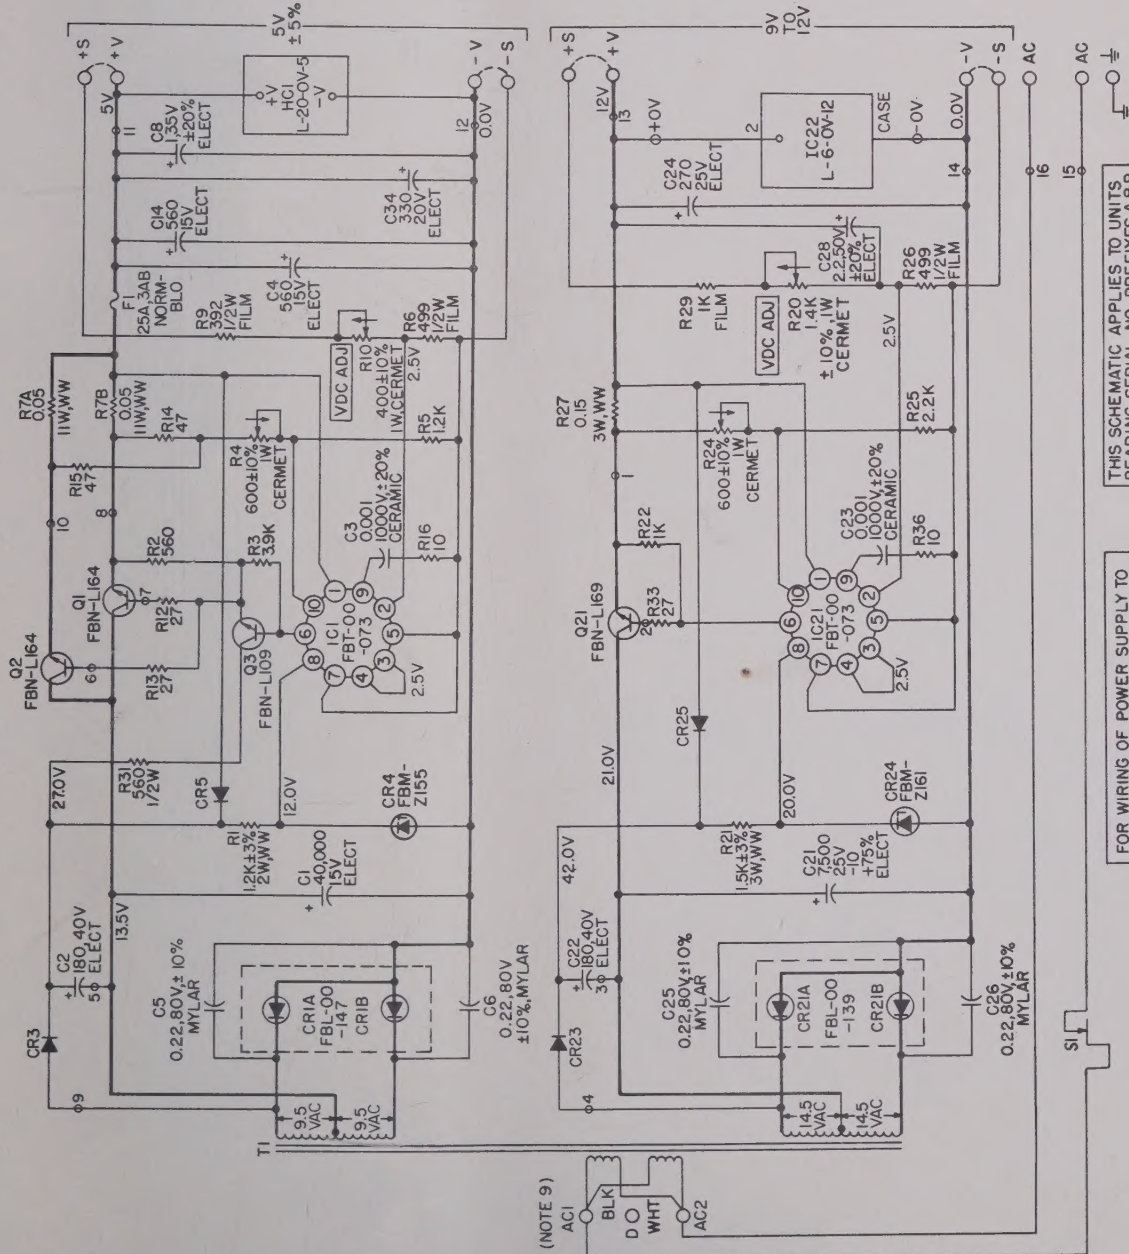

1. RESISTORS ARE COMP. 1/4 W WITH VALUE IN OHMS UNLESS OTHERWISE NOTED.
2. RESISTOR TOLERANCES: COMP. $\pm 10\%$, FILM $\pm 1\%$ WIRE-WOUND $\pm 5\%$, UNLESS OTHERWISE NOTED.
3. CAPACITOR VALUES ARE IN MICROFARADS.
4. CAPACITOR TOLERANCES: ELECTROLYTIC $-10\% +100\%$.
5. DESIGNATIONS ARE LAMBDA PART NUMBERS.
6. SYMBOLS:
 - ↑ INDICATES CLOCKWISE ROTATION OF SHAFT.
 - ➔ LAMBDA PART NO. FBL-00-030; USE IN4002 DIODE FOR REPLACEMENT UNLESS OTHERWISE NOTED.
 - ⊖ INDICATES TERMINAL ON PRINTED CIRCUIT BOARD.
7. CONDITIONS FOR CIRCUIT POINT MEASUREMENTS:
 - INPUT 115 VAC, 60 Hz; OUTPUT: RATED VOLTAGE, NO LOAD.
 - INDICATED VOLTAGES ARE TYPICAL VALUES AND ARE DC UNLESS OTHERWISE NOTED. DC MEASUREMENTS TAKEN WITH 20,000 OHMS/V VOLT-METER BETWEEN -V OF APPLICABLE OUTPUT AND INDICATED POINTS UNLESS OTHERWISE NOTED.
8. FOR INPUT OTHER THAN 57-63 Hz CONSULT FACTORY.
9. T1 PRIMARY CONNECTION SHOWN IS FOR 105-127 VAC INPUT. FOR 210-254 VAC INPUT: DISCONNECT BLK & WHT TRANSFORMER LEADS FROM TERMINALS AC1 & AC2. RECONNECT BOTH LEADS TO TERMINAL D.

SCHEMATIC DIAGRAM
REGULATED POWER SUPPLY
MODEL LND-P-MPU

△ LAMBDA

ELECTRONICS
MELVILLE, NEW YORK

DIVISION OF  INSTRUMENTS INC.

THIS SCHEMATIC APPLIES TO UNITS
BEARING SERIAL NO. PREFIXES ABB

FOR WIRING OF POWER SUPPLY TO
LOAD REFER TO SUPPLY-TO-LOAD
WIRING DIAGRAMS.
DOTTED CONNECTIONS SHOWN
INDICATE JUMPERS IN PLACE
FOR LOCAL SENSING CONNECTION.



5-Year Guarantee

We warrant each instrument manufactured by us, and sold by us or our authorized agents, to be free from defects in material and workmanship, and that it will perform within applicable specifications for a period of five years after original shipment. Our obligation under this guarantee is limited to repairing or replacing any instrument or part thereof, (except tubes and fuses) which shall, within five years after delivery to the original purchaser, be returned to us with transportation charges prepaid, prove after our examination to be thus defective.

We reserve the right to discontinue instruments without notice, and to make modifications in design at any time without incurring any obligation to make such modifications to instruments previously sold.

LAMBDA ELECTRONICS

515 BROAD HOLLOW ROAD • MELVILLE, L. I., NEW YORK • 516 MYRTLE 4-4200

DIVISION of  INSTRUMENTS INC.

MP MASTER



MA28800